



**Repair Parts List for HT and STN 200 lb – 2000 lb
Capacity Foot Operated Hydraulic Lift Tables
Bulletin 1208-D Hydraulic Jack Assemblies and Parts**

Item	Description
EHL-1F-18	Hydraulic Jack Assembly (18" stroke)* † Requires a Hydraulic Jack Treadle Kit
EHL-1F-XX	Hydraulic Jack Assembly (less than 18" stroke, please specify) † Requires a Hydraulic Jack Treadle Kit
EHL-4	Hydraulic Jack Pump Kit* For EHL-1 hydraulic jacks (table serial numbers greater than 28425) ††
EHL-50	Hydraulic Jack Repair Kit* For EHL-1 hydraulic jacks (table serial numbers greater than 28425) ††
EHL-51-A	Hydraulic Jack Treadle Kit (short treadle)* For EHL-1 hydraulic jacks (table serial numbers greater than 28425) ††
EHL-51-B	Hydraulic Jack Treadle Kit (medium treadle)* For EHL-1 hydraulic jacks (table serial numbers greater than 28425) ††
EHL-51-C	Hydraulic Jack Handle Kit (long treadle)* For EHL-1 hydraulic jacks (table serial numbers greater than 28425) ††
EHL-60W	Treadle Guide Kit (weld on) for HT & STN tables using a foot operated Hydraulic Jack Assembly The Treadle Guide Kit prolongs the life of EHL and JHL series Hydraulic Jack Assemblies and allows the operator to work more efficiently.
EHL-60B	Treadle Guide Kit (bolt on) for HT & STN tables using a foot operated Hydraulic Jack Assembly The Treadle Guide Kit prolongs the life of EHL and JHL series Hydraulic Jack Assemblies and allows the operator to work more efficiently.
JHL-4	Hydraulic Jack Pump Kit* For JHL-1 hydraulic jacks (original equipment for table serial numbers 24233 – 28425) ††
JHL-50	Hydraulic Jack Repair Kit* For JHL-1 hydraulic jacks (original equipment for table serial numbers 24233 – 28425) ††
CS06505020-PS-R	Rigid Casters 5" Poly Urethane Coated Steel - STN and HT 1000# to 2000# capacity tables
CS06505020-PS-S	Swivel Casters 5" Poly Urethane Coated Steel - STN and HT 1000# to 2000# capacity tables
CS06505020-ST-R	Rigid Casters 5" Steel - STN and HT 1000# to 2000# capacity tables
CS06505020-ST-S	Swivel Casters 5" Steel - STN and HT 1000# to 2000# capacity tables
FLO-663	Floor Locks for STN Lift Tables
FLM-663	Floor Locks for HT Lift Tables

* See attached photos/sketches and parts lists for assembly and kit details.

† Please verify the stroke of your hydraulic jack before ordering. Measure the hydraulic jack height in the collapsed position from the bottom of the base to the top of the ram. The stroke is approximately equal to hydraulic jack height minus 3.75 in.

†† Hydraulic Jack Pump and Repair Kits are not available for tables with serial numbers less than 24177. For these tables a replacement Hydraulic Jack Assembly (EHL-1 or EHL-9) must be purchased. For tables with serial numbers between 24177 and 24232 please contact Lexco Engineering and Manufacturing to verify which kits are available for your foot operated hydraulic lift table.

Troubleshooting Guide

If the table does not go up and down while pumping the hydraulic jack, then a Hydraulic Jack Pump Unit is typically required.

If the hydraulic jack significantly leaks hydraulic fluid around the cylinder, then a Hydraulic Jack Repair kit is typically required.

EHL- 1F-18 and EHL-1F-XX Hydraulic Jack Assembly



